

## *Lift and transport truck HTW 50/130 with 12 Volt Hydraulic unit*

A rugged, torsion-resistant frame structure, grey powder-coated with integrated 12 Volts hydraulic unit for vertical adjustment enables easy handling. The vertical adjustment is controlled via an UP/DOWN foot switch. A key-actuated switch prevents unauthorized operation and serves simultaneously as EMERGENCY OFF switch. A maintenance-free drive battery ensures a constant power supply. Moreover, the unit is supplied with an separate electronic rapid charger. 4 steerable solid rubber wheels, 2 of them lockable, 1 enabling locking as regards the direction, diameter 125 mm with special ball bearings, permanently lubricated and maintenance-free, which ensure an absolutely noiseless movement. The low deadweight permits straightforward shunting and operation of the lift and transport truck. A special valve ensures even lowering at various loads. A stainless steel roller track comprising 5 carrying rollers of corrosion-resistant material and plastic coating has been arranged on top of the truck. A holding device secures the body tray or coffin plate lying on it. The slide handle of the lift and transport truck can be removed. An anti-collision buffer is mounted to the front end.

*Technical data and dimensions, see back page*



*Lift and transport truck HTW 50/130*



*Foot switch HTW 50/130*


# Lift and transport truck HTW 50/130 with 12 Volt Hydraulic unit

Dimensions: W/D/H 2150 x 750 x 300 mm - lowest Position  
Dimensions: W/D/H 2150 x 750 x 1650 mm - highest Position  
Carrying capacity: max. 200 kg  
Deadweight: approx. 120 kg  
Material: Steel powder coated grey colour  
Type: HTW 50/130  
Article no.: 050.050.010

## **Additional model - HTW 51/130**

As above described however made **completely of stainless steel**

Dimensions: W/D/H 2150 x 750 x 300 mm - lowest Position  
Dimensions: W/D/H 2150 x 750 x 1650 mm - highest Position  
Carrying capacity: max. 200 kg  
Deadweight: approx. 120 kg  
Material: Stainless Steel, Material 1.4301 - ANSI 304  
Type: HTW 51/130  
Article no.: 050.120.010

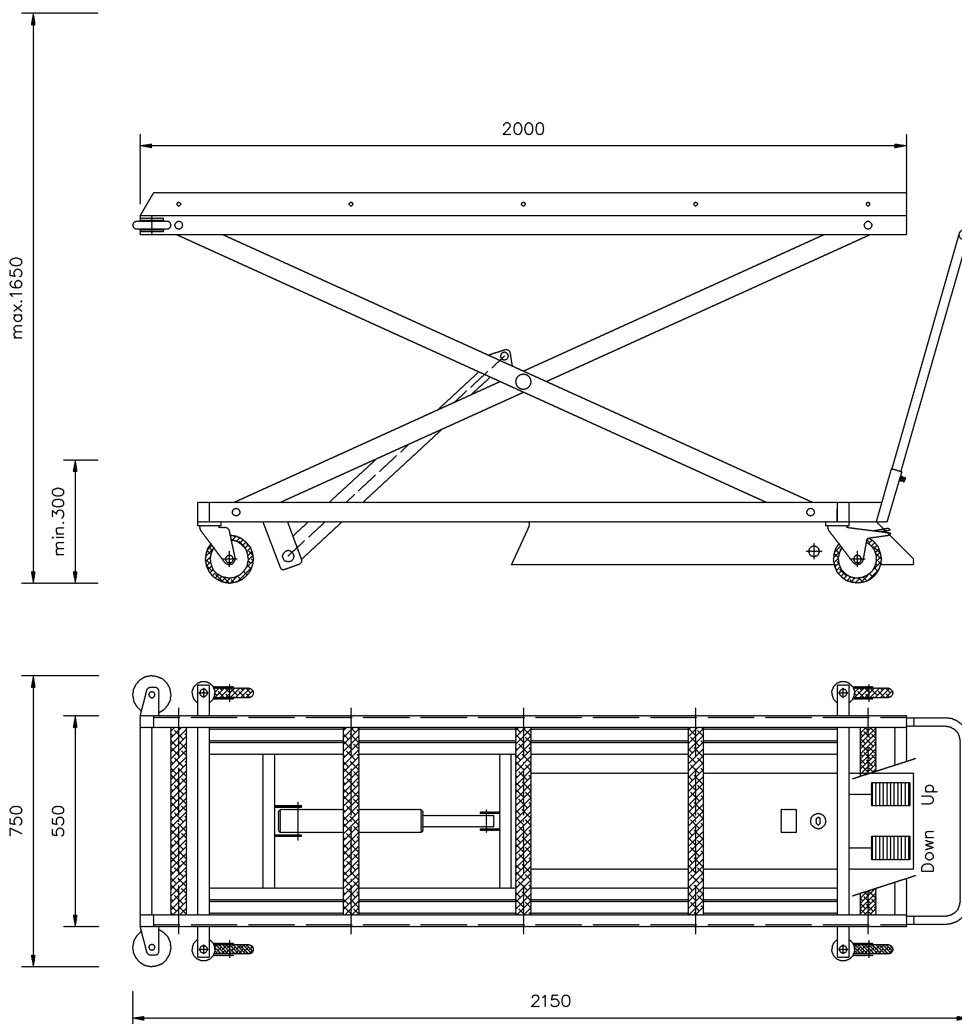

Subject to technical modifications as required by product improvements.